

Configuring the BioStation T2

- 1 Go to the TCP/IP submenu and check "Use BioStar Lite".
Menu > Network > TCP/IP > "Use BioStar Lite"

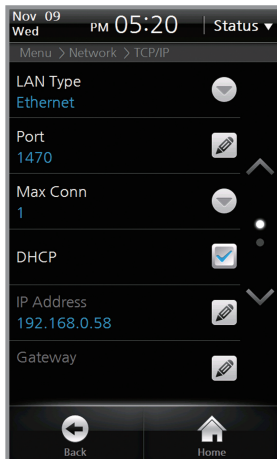


Fig. 1: TCP/IP submenu page 1

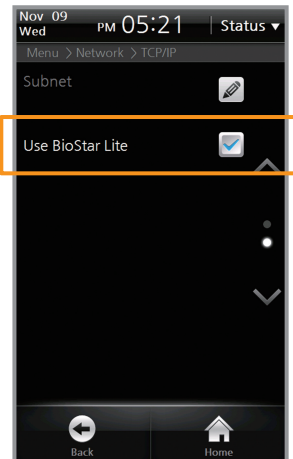


Fig. 2: TCP/IP submenu page 2

- 2 Write down the IP address currently set in the device.
Menu > Network > TCP/IP > "IP Address"

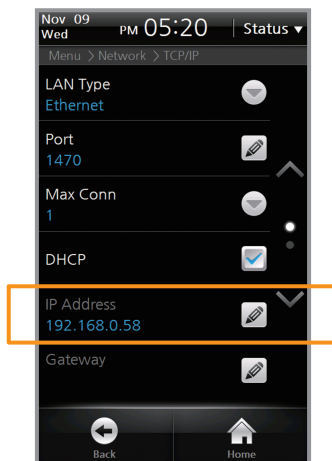


Fig. 3: TCP/IP submenu page 1

* If the IP address remains the default value of '127.0.0.1'; verify the IP configuration with your network administrator.

- 3 Open a web browser such as "Internet Explorer" or "Google Chrome" and enter the IP address of the device into the URL. The webpage for the BioStar Lite should open.

* Note: The BioStar Lite only supports one concurrent connection.